

Originalbetriebsanleitung / Original owner's manual / Notice originale / Istruzioni originali / Manual original / Původní návod k používání / Eredeti használati utasítás / Izvirna navodila / Pôvodný návod na použitie / Instrukcja oryginalna / Instrucțiuni originale / Originalne upute / Оригинална инструкция / Orijinal kullanım talimatları

Schwimmbadreiniger

Battery Pro



de	Schwimmbadreiniger.....	4	en	Pool cleaner.....	25
fr	Nettoyeur de piscine.....	45	it	Pulitore per piscina.....	67
es	Limpiafondos de piscina.....	88	cs	Čistič bazénů.....	109
hu	Úszómedence tisztító.....	130	sl	Čistilnik bazena.....	151
sk	Čistič bazénu.....	172	pl	Odkurzacz basenowy.....	193
ro	Dispozitiv de curățare a piscinei.....	214	hr	Čistač bazena.....	235
bg	Уред за почистване на басейни.....	256	tr	Yüzme havuzu temizleyicisi.....	278

General Information

Read and keep the operating instructions



These operating instructions are part of the "Battery Pro" pool cleaner (in the following also called "device"). They contain important information about start-up and operation.

Read the operating instructions and especially the safety instructions carefully before using the device. Non-observance of these operating instructions can lead to severe injuries or damage to the device.

The operating instructions are based on the standards and regulations in effect in the European Union. Also observe country-specific directives and laws abroad.

Keep the operating instructions for further use. If you pass on the device to a third party, you must pass on these operating instructions as well.

Intended use

This device is exclusively designed to clean private pools. The device is not suited for pools with liners with a liner thickness of less than 0.4 mm. The device is not suited for overflow pools, stainless steel pools or tiled pools and also not for pools with an air ring. The device is not suited for pools with an installed ladder.

When using in pools made of glass fiber reinforced plastic, it may not be possible to fully clean the walls.

This product is exclusively intended for private use and not suited for the commercial sector. Only use the device as described in these operating instructions. Any other use is considered inappropriate and may lead to material damage or even injury. The device is not a toy.

The manufacturer or retailer will not assume any liability for damage caused by inappropriate or incorrect use.

Explanation of Symbols

The following symbols are used in these operating instructions, on the device or on the packaging.



This symbol provides you with useful additional information on handling and use.



Products marked with this symbol meet all the applicable Community regulations of the European Economic Area.



 
Never use a sharp knife or other pointed object to open the packaging.
You may damage the contents.



Lithium ion batteries in equipment or lithium ion batteries packaged with equipment.



Weight of the packaging unit.



Dimensions of the packaging unit.



The “GS” (Tested Safety) certification mark confirms the device’s compliance with the German Product Safety Act (ProdSG for short).



This symbol provides information about the energy efficiency of external power adapters.



Only use the charger indoors



This symbol identifies devices that belong to the protection class II.

Safety

The following signal words are used in these operating instructions.

WARNING!

This signal symbol/word denotes a hazard with an average risk level that could lead to death or severe injury if it is not avoided.

CAUTION!

This signal symbol/word denotes a hazard with a low risk level that could lead to mild or moderate injury if it is not avoided.

NOTICE!

This signal word provides a warning about potential material damage.

General safety instructions

WARNING!

Risk of electric shock!

Faulty electric installation or excess mains voltage can cause an electric shock.

- Only connect the power cable if the mains voltage of the socket matches that on the type plate.
- Only connect the power cable to an easily accessible socket so that you can quickly disconnect it in the case of a fault.
- Only connect the power cable to a grounded socket.
- Only operate the device on a grounded socket secured with at least 16A.
- The device must be powered via a residual current device with a rated residual current of at most 30 mA.
- Do not operate the device if it shows visible damage or if the power cable is defective.
- Do not open the device; leave repairs to an expert. Contact the service address on the back of the instruction manual for this purpose. All liability and warranty claims will be void in the case of arbitrary repairs, improper connection or wrong operation.
- Never touch the power cable with wet hands.

- Never pull the power cable out of the socket by the cable; always hold it by the plug.
- Never use the power cable as a carrier handle.
- Keep the device and the power cable away from naked flames and hot surfaces.
- Do not place any objects on the power cable.
- Do not bury the power cable.
- Route the power cable such that no one can trip over it.
- Do not kink the power cable and do not place it over sharp edges.
- Do not use the device during a thunderstorm. Switch it off and pull the power cable out of the socket.
- Always switch off the device and disconnect it from the power supply if you are not using the device, when cleaning it or in the case of a fault.
- Only components that meet the original device data must be used for repair. There are electric and mechanical components in this device that are indispensable for hazard protection.
- Only use spare parts and accessory parts supplied or recommended by the manufacturer. All warranty claims will be void when using third-party components.
- Do not operate the device with an external timer or a separate remote system.

NOTICE!

- Never let the device run outside of the water as this can cause damage even after a short time.

Safety instructions for persons

⚠ WARNING!

Danger to children and persons with reduced physical, sensory or mental capacities (such as partially disabled persons/older persons

with reduced physical and mental capacities) or persons lacking experience and knowledge (such as older children).

Improper handling of the device can lead to severe injury or damage to the device.

- Only allow others to access the device after they have read and comprehended the entire manual or have been instructed about the intended use and the associated risks.
- Never let persons with reduced physical, sensory or mental capacities (such as children or drunk people) or a lack of experience and knowledge unsupervised near the device.
- Never allow children and persons with limited physical, sensory or mental capacities or persons lacking the respective experience and knowledge to operate the device.
- Do not let children clean or service the device.
- Children are not allowed to play with the device or with the power cable.
- Do not operate the device under the influence of drugs, alcohol or medication or if you are tired.

⚠ WARNING!

Risk of injury through insufficient qualification!

Insufficient experience or skills for handling the required tools and insufficient knowledge of regional or normative regulations for the required work can lead to severe injuries or material damage.

- Assign all work whose risks you cannot estimate due to insufficient personal experience to a qualified expert.

Additional safety instructions for chargers

Use and handling of the charger

- Only connect the charger if the mains voltage of the socket matches that on the type plate.
- Only connect the charger to an easily accessible socket so that you can quickly disconnect it in the case of a fault.

- Always ensure sufficient ventilation while charging the rechargeable battery. Gases might be released.
- Only use the charger to recharge rechargeable batteries approved by the manufacturer.
- Do not recharge non-rechargeable batteries.
- A cracked or otherwise damaged rechargeable battery must not be connected to the charger.
- Protect the charger from any kind of moisture.
- Only use the charger indoors. Never operate it in damp rooms or in the rain.
- Never use the charger in environments with explosive or flammable materials. Risk of fire and explosion.
- Do not place any objects on the charger and do not cover the charger.
- Do not install the charger close to a heat source.
- Regularly check the charger for damage.
- Do not use a damaged charger until it has been repaired.
- Do not take the charger apart. Repairs must only be carried out through a licensed technical customer service.
- Do not use the charger if it has been subjected to blows or knocks or if it was dropped.
- Disconnect the charger from the mains after each use.
- Disconnect the charger from the mains before cleaning, servicing, storing and transporting it and let it cool down completely.

Unpacking and checking the package contents

NOTICE!

Careless opening of the packaging, especially with the help of sharp or pointed objects, may cause damage to the device.

- Open the packaging very carefully.
- Do not penetrate the packaging with sharp or pointed objects.

WARNING!

Packaging materials pose a risk of suffocation!

Catching your head in the packaging foil or swallowing other packaging materials can cause death. There is a higher risk for

children and mentally challenged persons who cannot estimate the hazard potential due to lack of knowledge and experience.

- Prevent children and mentally challenged persons from playing with the packaging materials.

NOTICE!

There is a higher risk of damage to the device if it is stored or transported without the packaging.

- Do not dispose of the packaging.
- In the case of damage, substitute the packaging with an at least similar box.

Checking the delivery for completeness and damage


1. Open the packaging carefully.
2. Take all parts out of the packaging.
3. Check the completeness of the delivery.
4. Check the delivery for damage.

Description

Description of the pool cleaner

The device cleans the floor and the walls of the pool. The cleaning roller of the device removes biofilms in the pool but cannot remove any algae. Detached deposits and floating substances are filtered out of the pool water.

Status indicator

The status indicator  informs you about the operating state:

lit blue

The device is switched on.

blinking blue

The device cleans the pool.

lit pink

The device is out of the water.

blinking yellow

The rechargeable battery is almost flat and the device is traveling toward the pool wall.

lit yellow

The device is done cleaning.

Preparation

Charging the rechargeable battery

⚠ WARNING!

Risk of fire!

Charging at a temperature below 10 °C leads to chemical damage to the cell and can cause a fire.

- Charge the rechargeable battery at room temperature.

1. Switch off the device before charging.
2. Pull the cap **5** out of the charging socket.

3. Connect the charger to the device.


4. Plug the charger into a socket.

*The charge control indicator is lit red.
The rechargeable battery is charging.*

5. When the charge control indicator is lit green, disconnect the charger from the power supply and the device.

6. Put the cap **5** in the charging socket.

The rechargeable battery is charged.

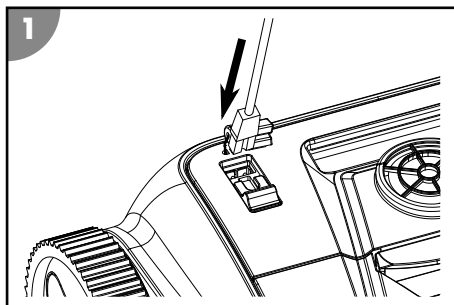

Operation

Check the following before each use:

- Is there visible damage on the device?
- Is there visible damage on the control elements?
- Do all individual parts function?
- Are the accessories in perfect condition?
- Are all cables in perfect condition?

Do not start up a damaged device or damaged accessories. Have them checked by the manufacturer or its customer service or a qualified service technician.

Cleaning the pool

Observe the following before cleaning your pool:


- We recommend thoroughly cleaning the device before using it for the first time.
- Remove any cover or film from the pool.
- Remove obstacles (such as a ladder) from the pool.
- Switch off the filter system at least one hour before the start of cleaning so that particles in the water can settle on the floor.
- Never let the device run outside of the water as this can cause damage even after a short time.

Proceed as follows to clean your pool:


1. Insert the filter unit.
2. Place the device in the pool and switch it on.

Inserting the filter

1. Open the hatch **7**.

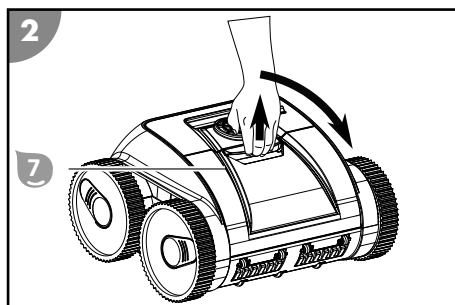


2. Position the filter unit **8** on the intake duct.

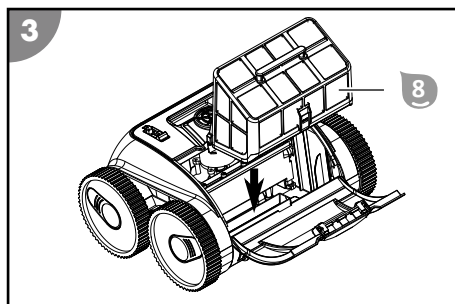

3. Close the hatch **7** so that it locks in place.

The filter is inserted.

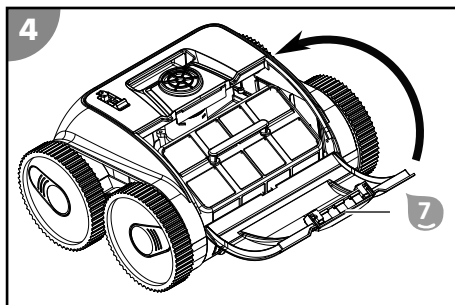

Placing the device in the pool and starting cleaning


⚠ CAUTION!

Risk of injury!

The device can hurt persons in the pool.


- Make sure no one is in the pool while the device is in the water.

1. Hold the device by the handle and lower it slowly into the water until all the air has escaped. The device should run at a right angle to the pool wall.

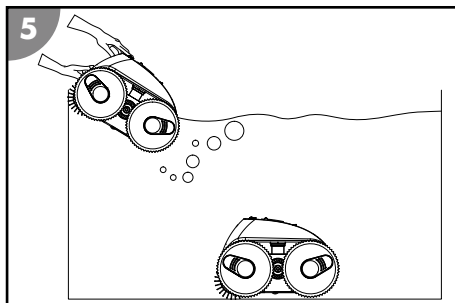

2. Turn on the ON/OFF switch **6**.
3. Then let the device sink to the bottom of the pool.

*The device is in the pool and starts cleaning with a time delay. The status indicator **4** blinks blue.*

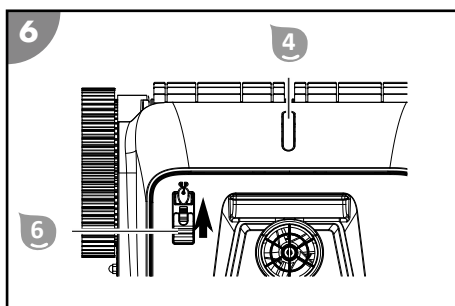

Switching off the device

Proceed as follows to switch off the device:

1. Lift the device out of the pool and switch it off.
2. Clean the filter unit and the device.

Stopping cleaning

Cleaning stops automatically when the rechargeable battery is almost drained.

The status indicator blinks yellow while the device travels toward the pool wall. Once it is at the wall, it is lit solid yellow.

Lifting the device out of the pool

NOTICE!

The pump of the device can be damaged if it is switched on or off outside of the water.

- Only switch the device on or off when it is located below the water surface.
- 1. Slowly pull the device to the surface of the water using the hook and a telescopic rod until you can reach the handle.
- 2. Slowly lift the device out of the water by the handle and hold it above the water surface for 10 to 15 seconds so that most of the water can flow back into the pool.
- 3. Turn off the ON/OFF switch.

The status indicator goes out and the device switches itself off.

- 4. Set down the device next to the pool.

The device is lifted out of the pool.



Clean the device after each use to ensure continued fault-free operation.

Cleaning

NOTICE!

Improper cleaning might damage the device.


- Clean the surface of the device with plain water after each use.
- Do not use any aggressive cleaning agents.
- Do not use any sharp or metal objects such as knives, hard scrapers or similar.
- Do not use any cleaning brushes.
- Do not use a high-pressure cleaner.


Cleaning the device


1. Remove and clean the filter.
2. Rinse the device after each use with plain tap water inside and out.

The device is clean.


Removing the filter

1. Open the hatch .

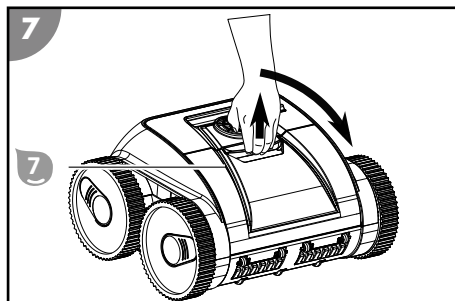


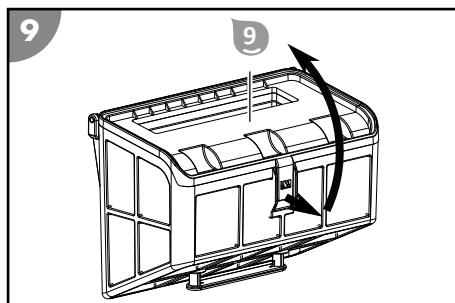
2. Pull the filter unit  vertically up and out of the device.

The filter is removed.

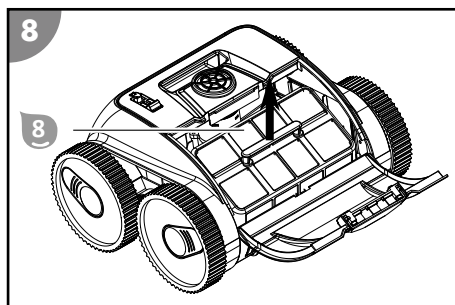



Cleaning the filter

1. Pull the tap and open the cover  of the filter unit.




2. Thoroughly rinse the filter unit with plain tap water.

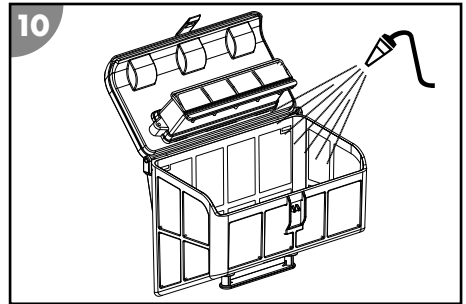

3. Close the cover  of the filter unit so that it locks in place.

The filter is cleaned.

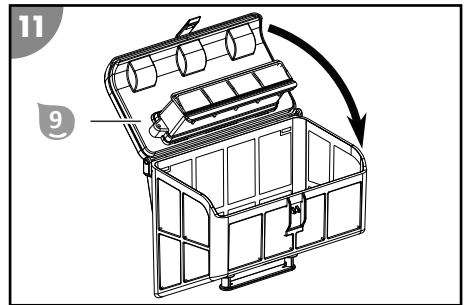

Storage

1. Thoroughly clean the device (see section "Cleaning").
2. Let all parts dry completely.
3. Fully charge the device.
Recharging is required after at latest 3 months due to self-discharge.
4. Then store the device and its accessories in a dry and frost-free place ($\geq +5\text{ }^{\circ}\text{C}$) without direct sunlight.

Troubleshooting

Fault description	Cause	Remedy
Charger blinks red.	Low rechargeable battery voltage or faulty rechargeable battery.	Contact customer service.
Status indicator is lit pink.	Device is out of the water.	Switch the device off. Only switch the device back on once it is in the water and all the air has escaped.

Fault description	Cause	Remedy
The device cannot reach all spots.	The water circuit of the pool is switched on.	Switch off the filter system of the pool.
	The device becomes stuck on the drain grate.	Switch off the filter system of the pool.
The device does not completely move up the wall.	The filter is clogged.	Clean the filter.
	Algae grows on the walls.	Clean the pool walls.
	The water temperature is too high or too low.	Operate the device at water operating temperature (see section "Technical data").
	The tires or the cleaning roller is/are worn.	Check the tires and the cleaning roller for wear and replace them if necessary.
	The device is too light and topples.	Switch off the device and let all the air escape.
	The pH value and the chlorine quantity are not properly set.	Adjust the pH value and the chlorine value to the correct value (see section "Technical data").
	The device has too little buoyancy.	Attach additional buoyancy aids (part of the package contents). See "Installing the buoyancy aids".
The device does not sink.	There is air in the device.	Switch off the device and let all the air escape.
	The salt content is too high and the device has more buoyancy.	Set the correct salt content. See section "Technical data".
The device rises to the surface.	The device climbs too high or there is air trapped in the device.	Switch off the device and let all the air escape.
	The salt content is too high and the device has more buoyancy.	Set the correct salt content. See section "Technical data".
The device is defective.		Contact customer service.

If the problem cannot be solved, contact the customer service listed on the last page.

Technical data


Model	061206
Type of rechargeable battery	Lithium ion
Rechargeable battery capacity	8800 mAh
Charging time	7 to 8 hours
Battery runtime	up to 90 min
Safety class	IPX8
Ambient temperature	10 °C to 40 °C
Operating temperature (water)	10 °C to 35 °C
pH value	7.0 to 7.4
Chlorine value	0.3 - 0.6 mg/l
Salt content of water (salt electrolysis)	<0.5%
Maximum cleaning surface in pool	270 m ²
Maximum working depth	2 m
Width of cleaning drum	275 mm
Crawl speed	11 m/min
Filter throughput	10 m ³ /h
Filter mesh	180 µm









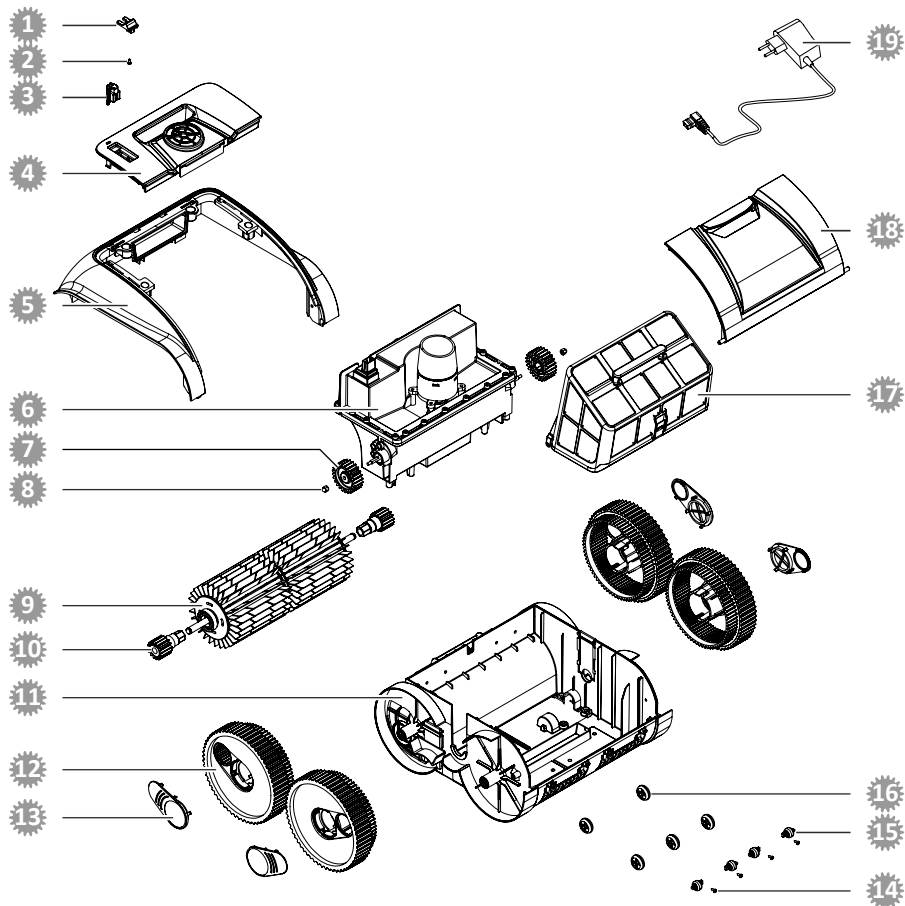










Charger

Model	XSG1261800EU
Input voltage	100-240 V AC
Frequency	50-60 Hz
Output voltage	12.6 V===
Rated output current	1.8 A
Rated power	45 W

Spare parts

B



-  061361 - ON/OFF switch
-  061362 - screw for ON/OFF switch
-  061363 - cap for charging socket
-  061360 - top part of housing
-  061365 - housing frame
-  061366 - motor unit
-  061367 - drive wheel
-  061368 - union nut for drive wheel
-  061369 - cleaning roller
-  061370 - cleaning roller drive wheel
-  061371 - bottom part of housing
-  061372 - wheel
-  061373 - wheel cover
-  061377 - screw
-  061376 - support wheel 2
-  061375 - support wheel 1
-  061374 - filter unit
-  061364 - hatch for filter unit
-  061378 - charger

Declaration of Conformity



You can request the EU Declaration of Conformity from the address stated at the end of this instruction manual.

Disposal

Disposing of the packaging

Sort the packaging before you dispose of it. Dispose of paperboard and cardboard with the recycled paper service and wrappings with the appropriate collection service.

Disposing of used appliances



Used appliances do not belong in the household waste!

If the device can no longer be used, each consumer **is obligated by law to drop off used appliances separate from the household waste** at a municipal collection point. This ensures that used appliances are recycled properly and negative effects on the environment are avoided. Therefore

electrical appliances are marked with the above symbol.